 


OWNERS MANUAL



CF-2165A

INCLINE/DECLINE

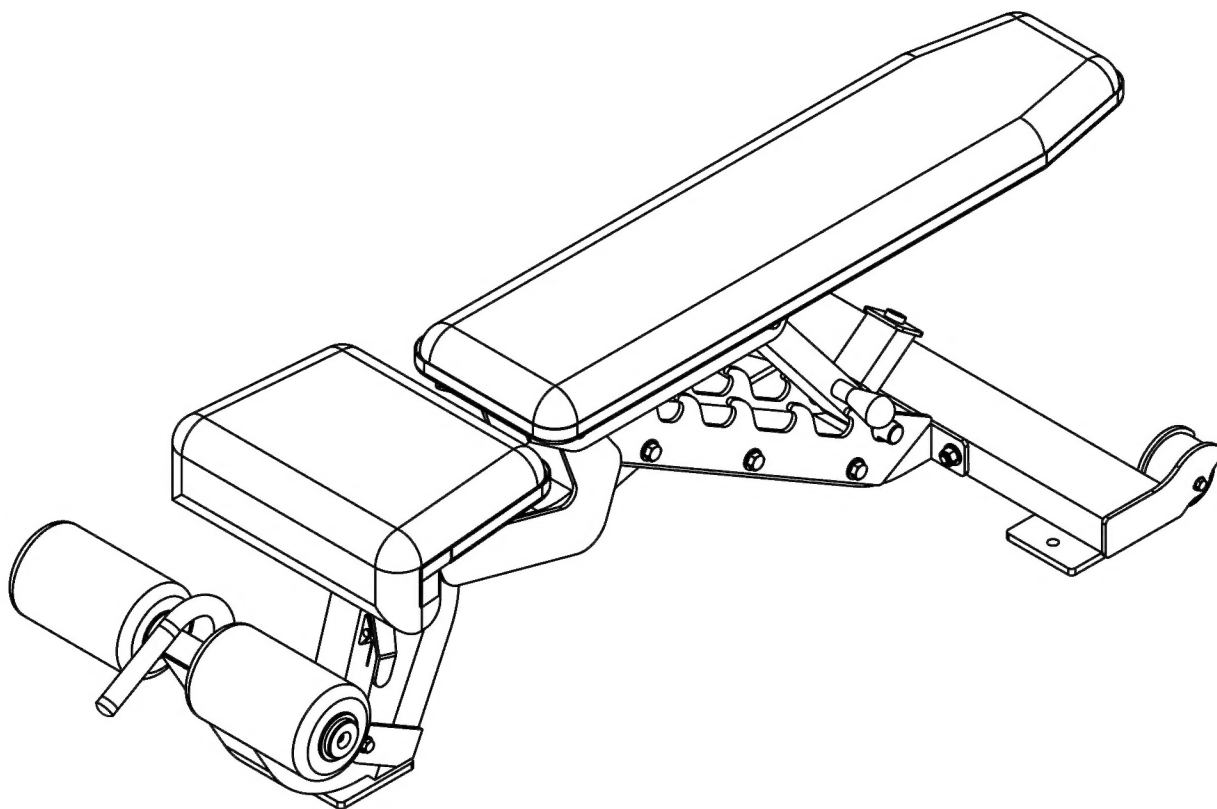

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

CATALOG NUMBER

0603-005

Customer Service

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558

OWNERS MANUAL

CONTENT

| | |
|--|-----------|
| INSTRUCTIONS (Step 1)..... | 2 |
| FRAME ASSEMBLY (Step 2)..... | 4 |
| PRE-ASSEMBLY (Step 3)..... | 20 |
| PART LISTING..... | 23 |
| HARDWARE LISTING..... | 24 |
| BOLT SIZING CHART..... | 25 |
| WASHER SIZING CHART..... | 27 |
| WEIGHT TRAINING TIPS..... | 29 |
| WEIGHT TRAINING EXERCISE LOG..... | 31 |
| DECAL PLACEMENTS..... | 33 |
| GENERAL MAINTENANCE INFORMATRION..... | 38 |
| LIMITIED WARRANTY..... | 40 |

OWNERS MANUAL

Step 1 INSTRUCTIONS

Before beginning assembly please take the time to read the instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use the part number and description from the lists. Use only Hoist replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

Hoist equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized Hoist dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Socket Wrench

1/2", 9/16" and 3/4" Sockets

3/4" Open end Wrench

Crescent Wrench

Rubber Mallet

 
Tape Measure

OWNERS MANUAL



OWNERS MANUAL

Step 2 FRAME ASSEMBLY

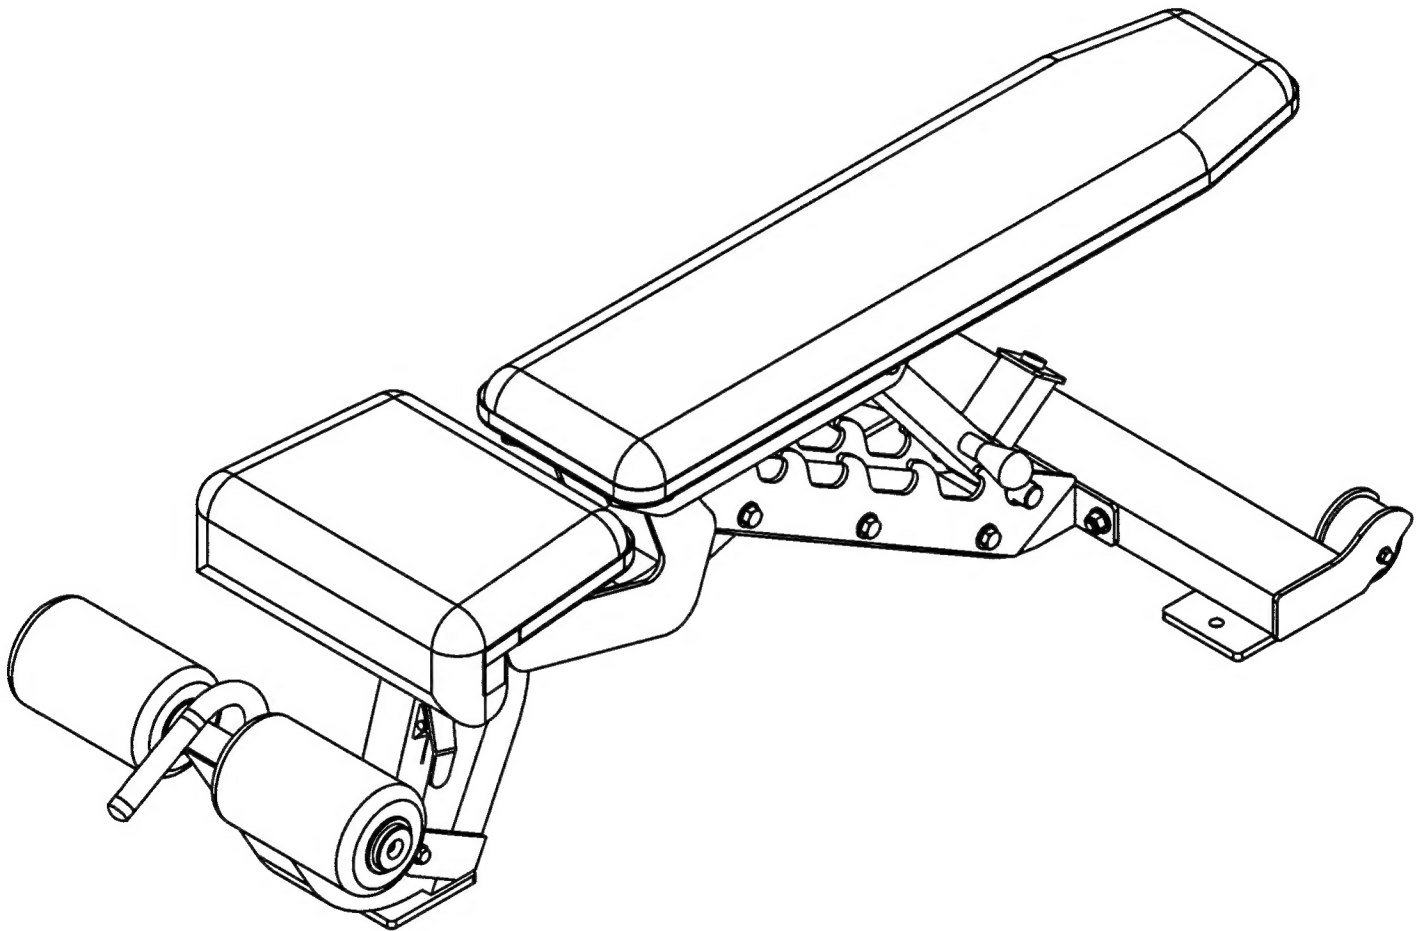

OWNERS MANUAL

Step 2a FRAME ASSEMBLY

Start assembly by bolting (1) and (2) together. Wrench Tighten bolts.

 
Part Descriptions

- 1 - MAIN FRAME
- 2 - MAIN WHEEL ASSEMBLY

Hardware Descriptions

- H - 1/2" -13UNC x 4 3/4" HEX BOLT
- AA - 1/2" FLAT WASHER
- BA - 1/2" NYLOK NUT
- CA - RUBBER FOOT PAD

OWNERS MANUAL

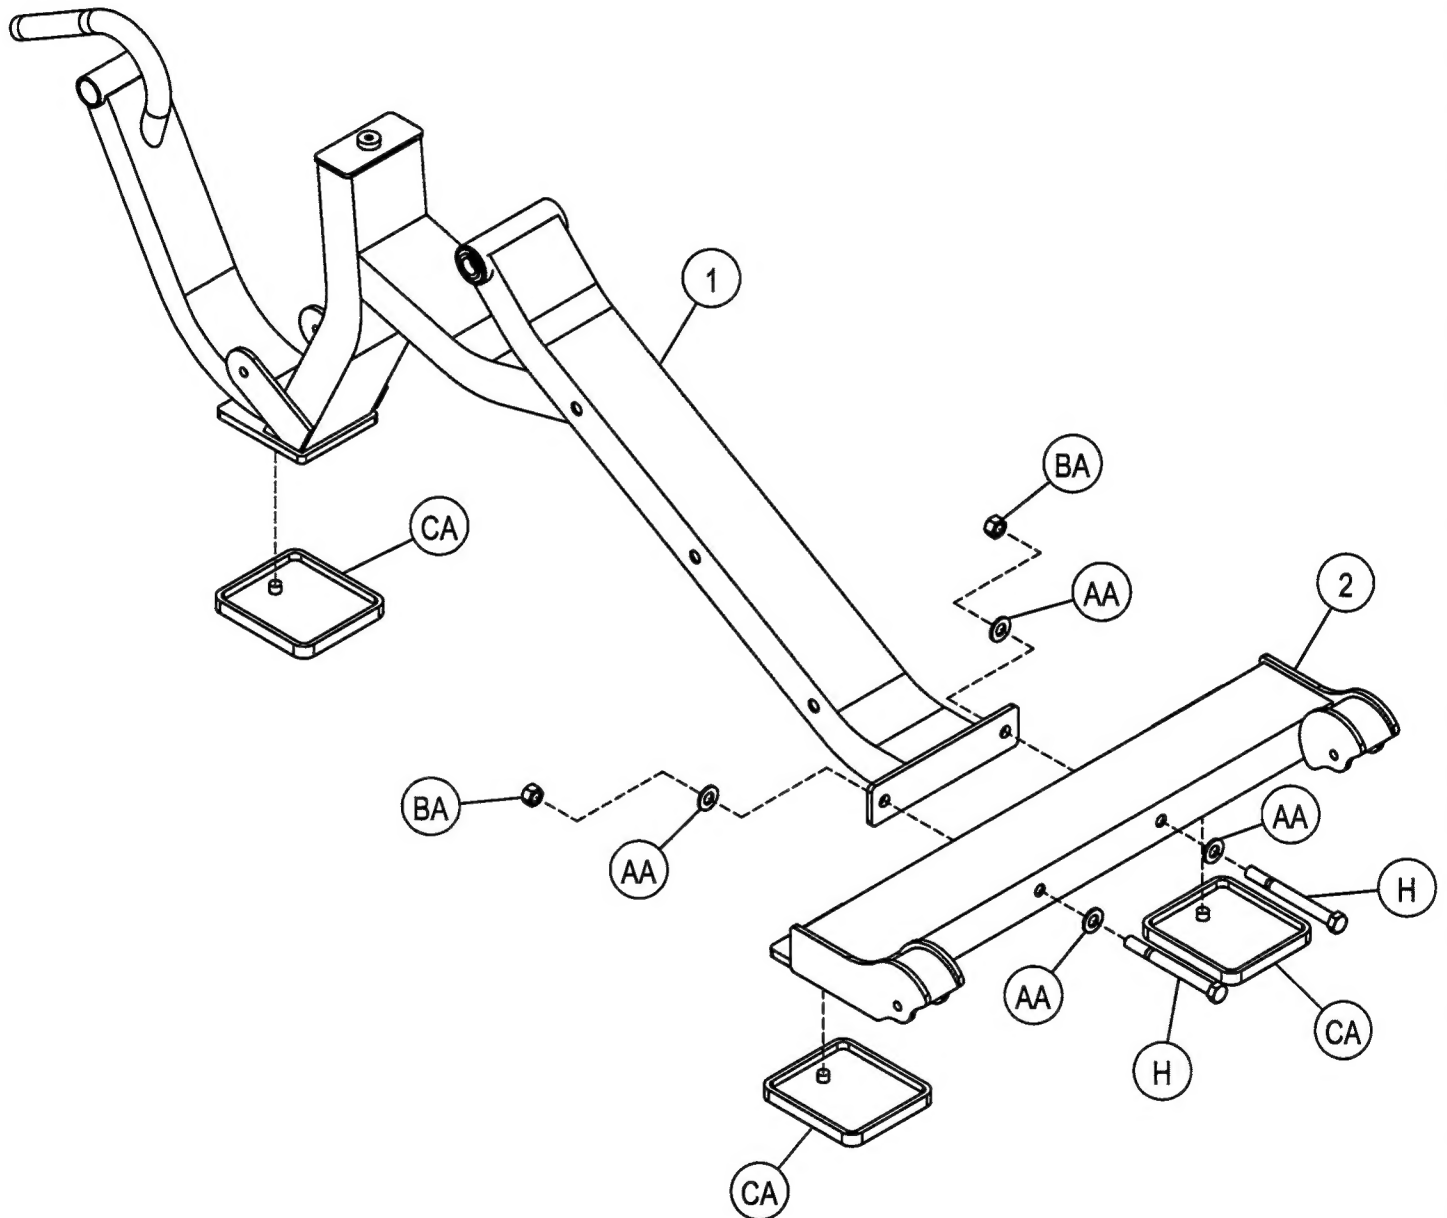

OWNERS MANUAL

Step 2b

FRAME ASSEMBLY

In this step start by inserting (CD) into (CE) and attach (CE) to (2) and Wrench Tighten bolts. Next bolt both (3)'s onto (1) and Wrench Tighten.

 
Part Descriptions

- 1 - MAIN FRAME
- 2 - MAIN WHEEL ASSEMBLY
- 3 - SCALLOPED PLATE

Hardware Descriptions

- D - 5/16" -18UNC x 2 3/4" HEX BOLT
- E - 1/2" -13UNC x 5" HEX BOLT
- AA - 1/2" FLAT WASHER
- AC - 5/16" SAE WASHER
- BA - 1/2" NYLOK NUT
- BD - 5/16" NYLOK NUT
- CD - WHEEL AXLE
- CE - WHEEL

OWNERS MANUAL

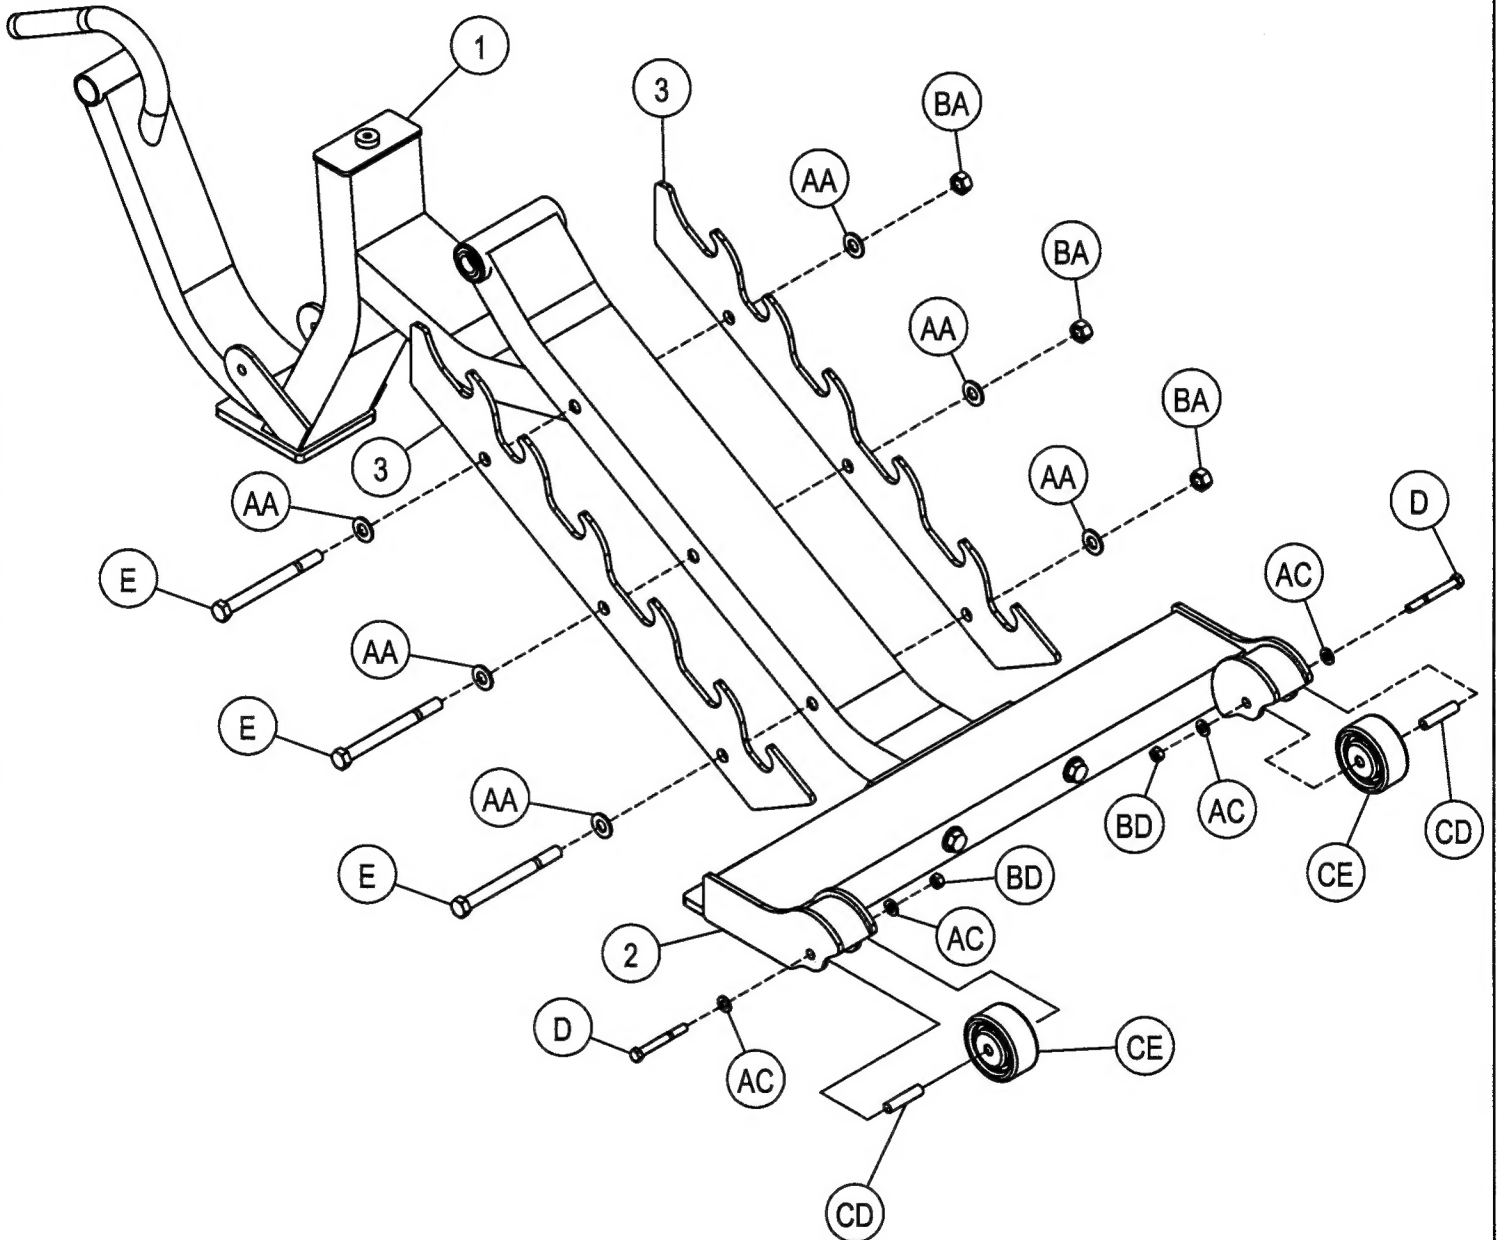

OWNERS MANUAL

Step 2c FRAME ASSEMBLY

In this step start by sliding (8) into (4) and secure with (I). Next slide (5) into (4), connect (4) to (1) and Wrench Tighten bolt until snug then back off 1/2 turn or enough to make (4) swing freely.

 
Part Descriptions

- 1 - MAIN FRAME
- 4 - SEAT SELECTORIZED ASSEMBLY
- 5 - 3/4" DIA. x 3.94" AXLE
- 8 - ADJUSTABLE SEAT ASSEMBLY

Hardware Descriptions

- J - 3/8" -16UNC x 5" HEX BOLT
- I - 3/8" -16UNC x 3/4" SQ.
HEAD SET SCREW
- AB - 3/8" WASHER
- BB - 3/8" NYLOK NUT

OWNERS MANUAL

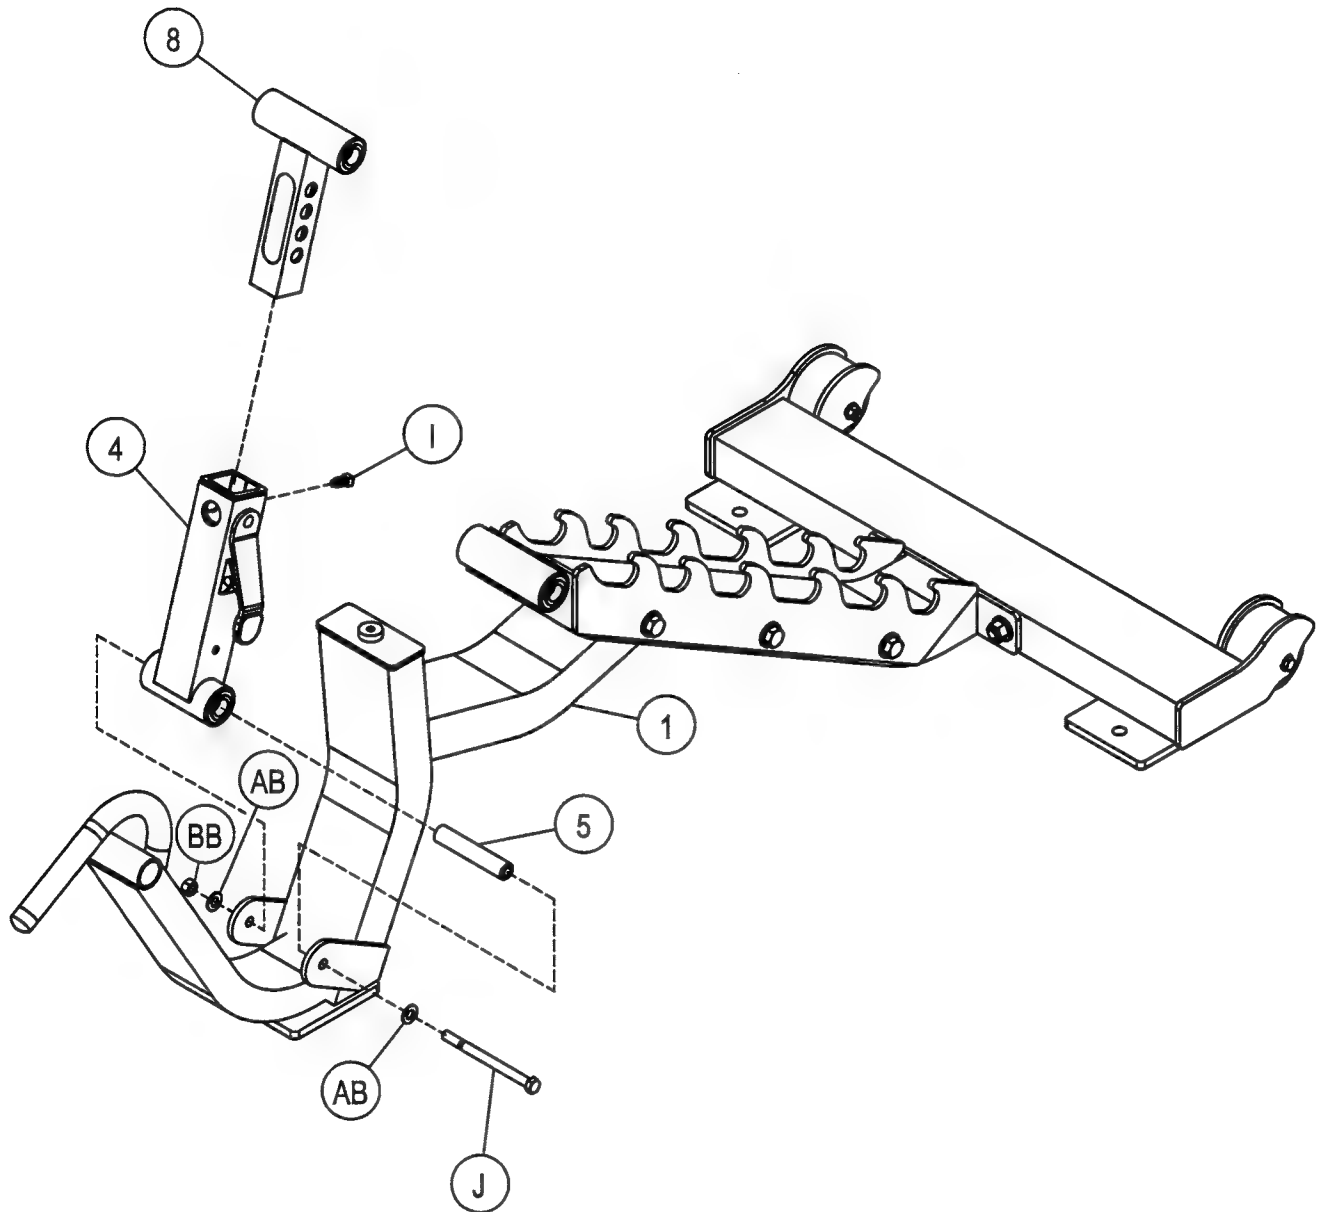

OWNERS MANUAL

Step 2d FRAME ASSEMBLY

In this step start by sliding (11) thru (1). Next, starting from one side of (11) slide (AD), (12) and another(AD) onto (11). Apply the same procedured on the other side. *Wrench Tighten* bolts. Next slide (7) into the end of (6) and secure with (K). Now attach (27)'s to both sides of (6).

 
Part Descriptions

- 1 - MAIN ASSEMBLY
- 6 - SELECTORIZED ASSEMBLY
- 7 - Ø 1" SHAFT x 5.25" L.G.
- 9 - 3/8" FLATHEAD CAP, 2" DIA x 5/16" THICK
- 11 - 1" ROLLER BAR
- 12 - 5" DIA x 8" LG. ROLLER
- 27 - ADJUSTOR KNOB

Hardware Descriptions

- B - 3/8" -16UNC x 1" FLATHEAD BOLT
- K - 5/16" -16UNC x 1" BUTTON HEAD SCREW
- AD - PLASTIC FENDER WASHER
- AE - 5/16" INTERNAL LOCK WASHER
- AG - 5/16" CURVED WASHER
- CL - NYLINER BUSHING

OWNERS MANUAL

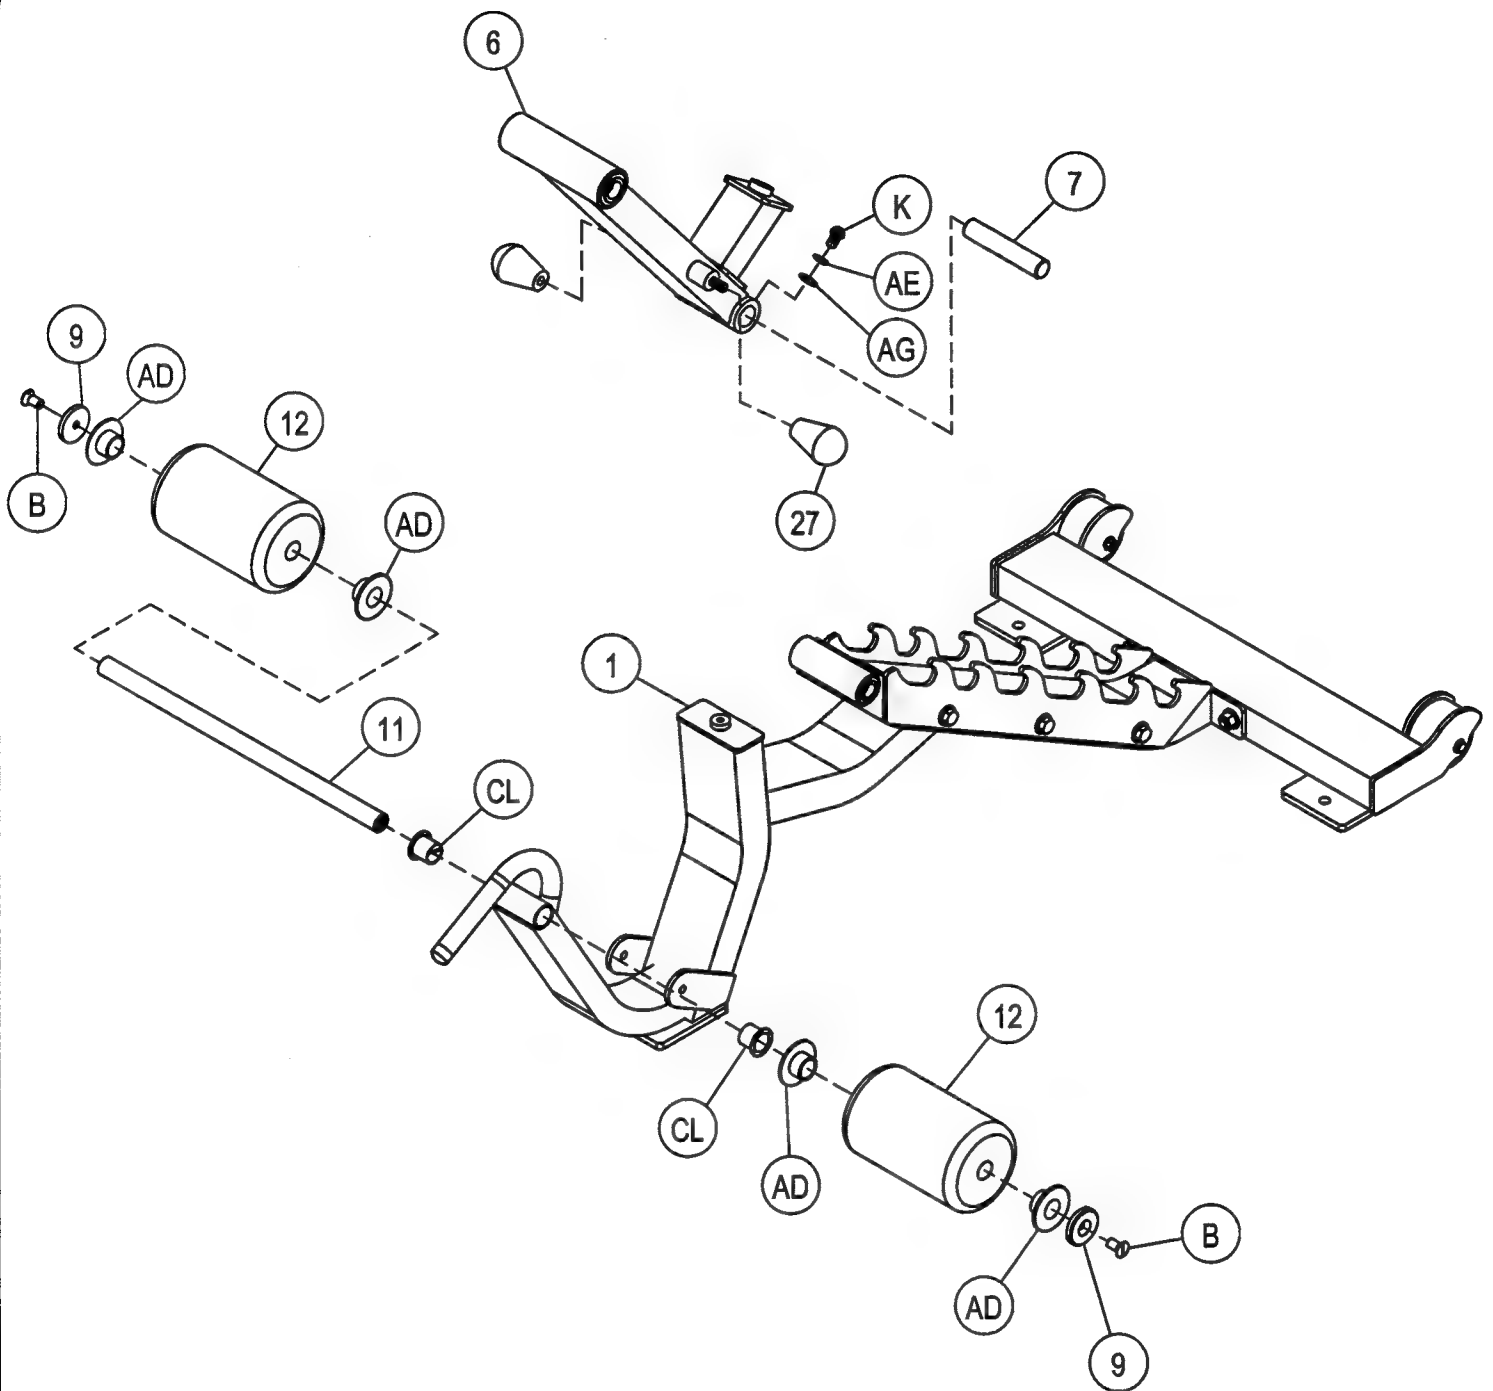

OWNERS MANUAL

Step 2e FRAME ASSEMBLY

In this step start by sliding (25) into (8). Connect (13) to (8) and Wrench Tighten bolt snug then back off 1/2 turn or enough to make sure (13) swings freely.

 
Part Descriptions

8 - ADJUSTABLE SEAT ASSEMBLY
13 - PIVOTING SEAT ASSY
25 - 3/4" DIA. x 5.13" AXLE

Hardware Descriptions

F - 3/8" -16UNC x 6 1/4" HEX BOLT
AB - 3/8" WASHER
BB - 3/8" NYLOK NUT

OWNERS MANUAL

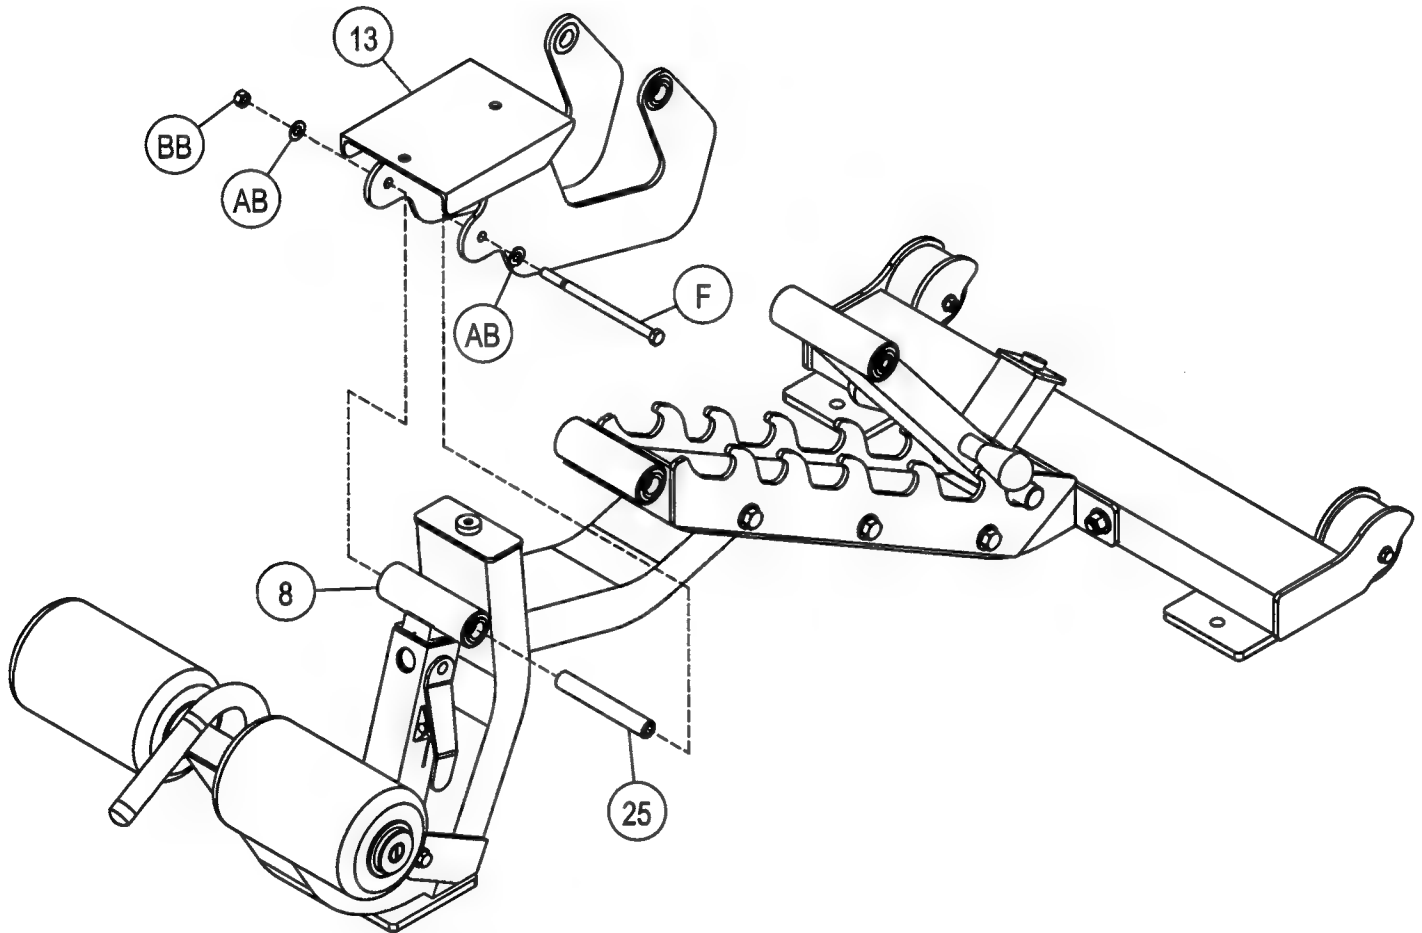

OWNERS MANUAL

Step 2f FRAME ASSEMBLY

In this step start by inserting one (26) into (1) and another (26) into (6). Connect pivot points with bolts (A). Wrench Tighten bolts snug then back off 1/2 turn.

 
Part Descriptions

1 - MAIN ASSEMBLY
6 - SELECTORIZED ASSEMBLY
13 - PIVOTING SEAT ASSY
14 - PIVOTING BACK ASSY
26 - 3/4" DIA. x 5.94" AXLE

Hardware Descriptions

A - 3/8" -16UNC x 7" HEX BOLT
AB - 3/8" WASHER
BB - 3/8" NYLOK NUT

OWNERS MANUAL

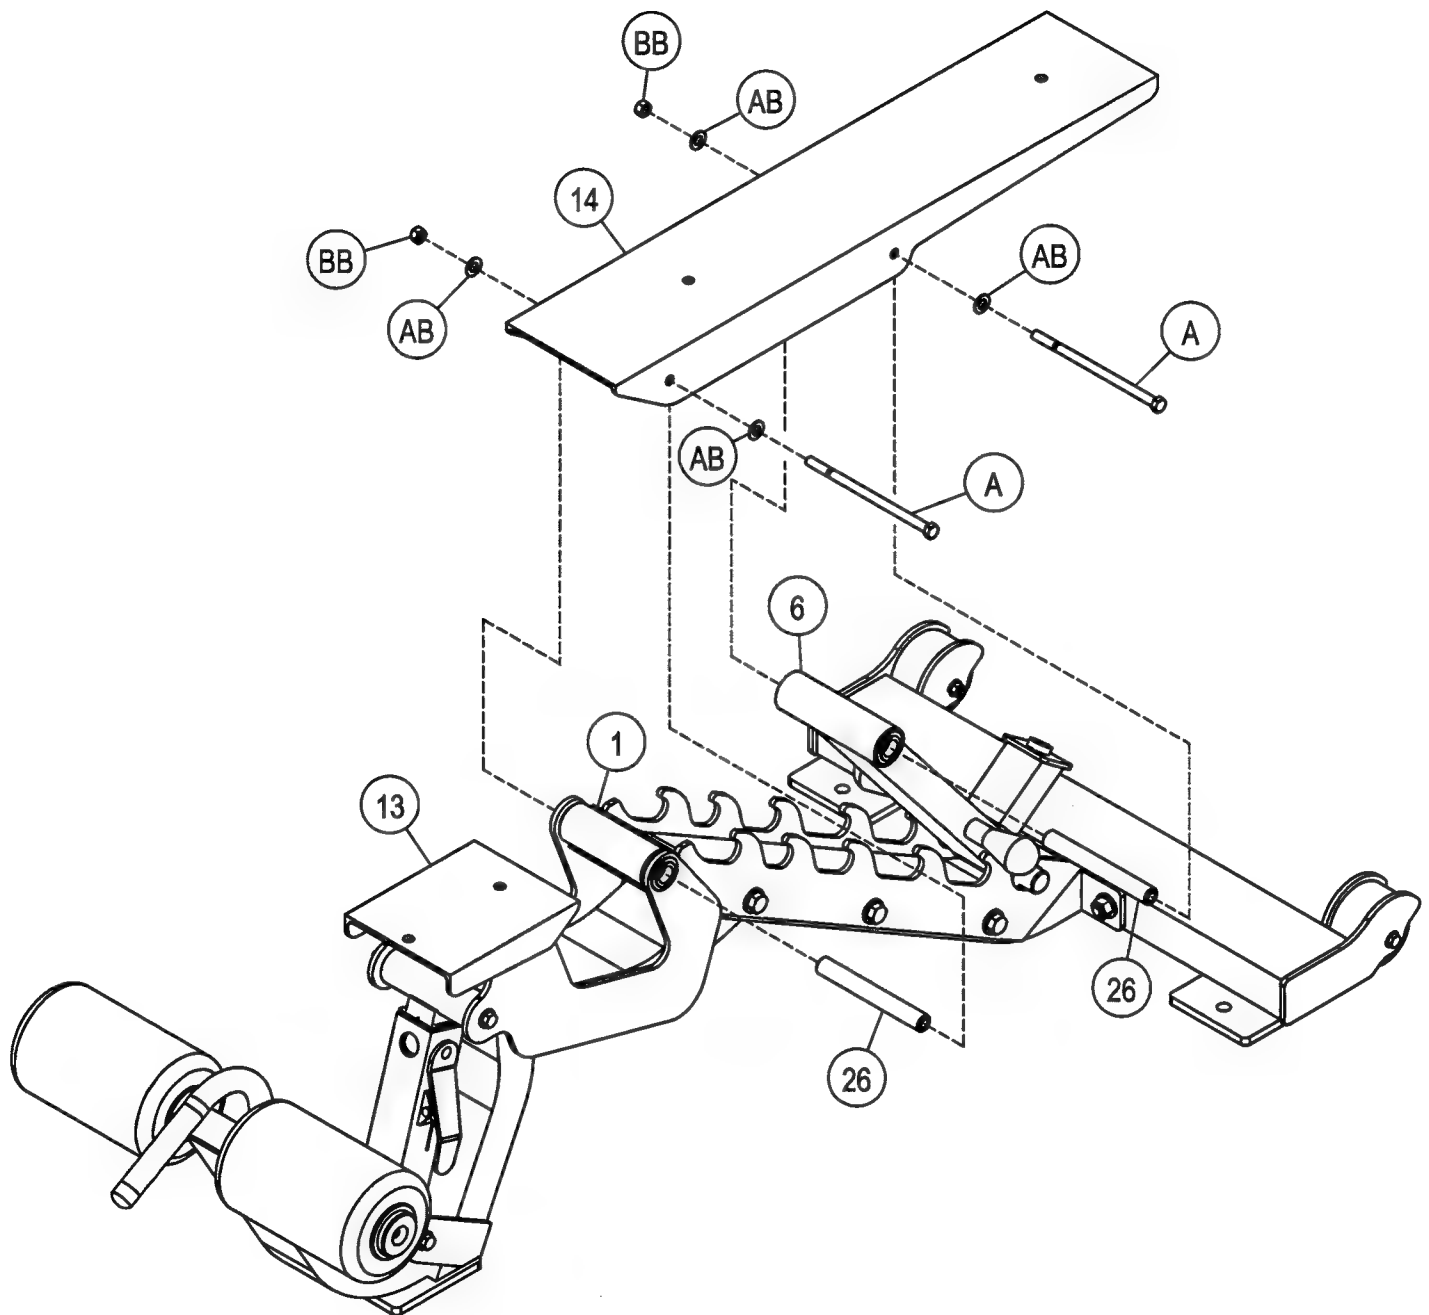

OWNERS MANUAL

Step 2g FRAME ASSEMBLY

In this step start by attaching (16) and (15) to (14), then (18) and (17) to (13). Wrench Tighten bolts.

 
Part Descriptions

13 - PIVOTING SEAT ASSY
14 - PIVOTING BACK ASSY
15 - BACK GUARD
16 - BACK PAD ASSY
17 - SEAT GUARD
18 - SEAT PAD ASSY

Hardware Descriptions

G - 5/16" -18UNC x 1 1/4" HEX BOLT
AF - 5/16" USS WASHER

OWNERS MANUAL

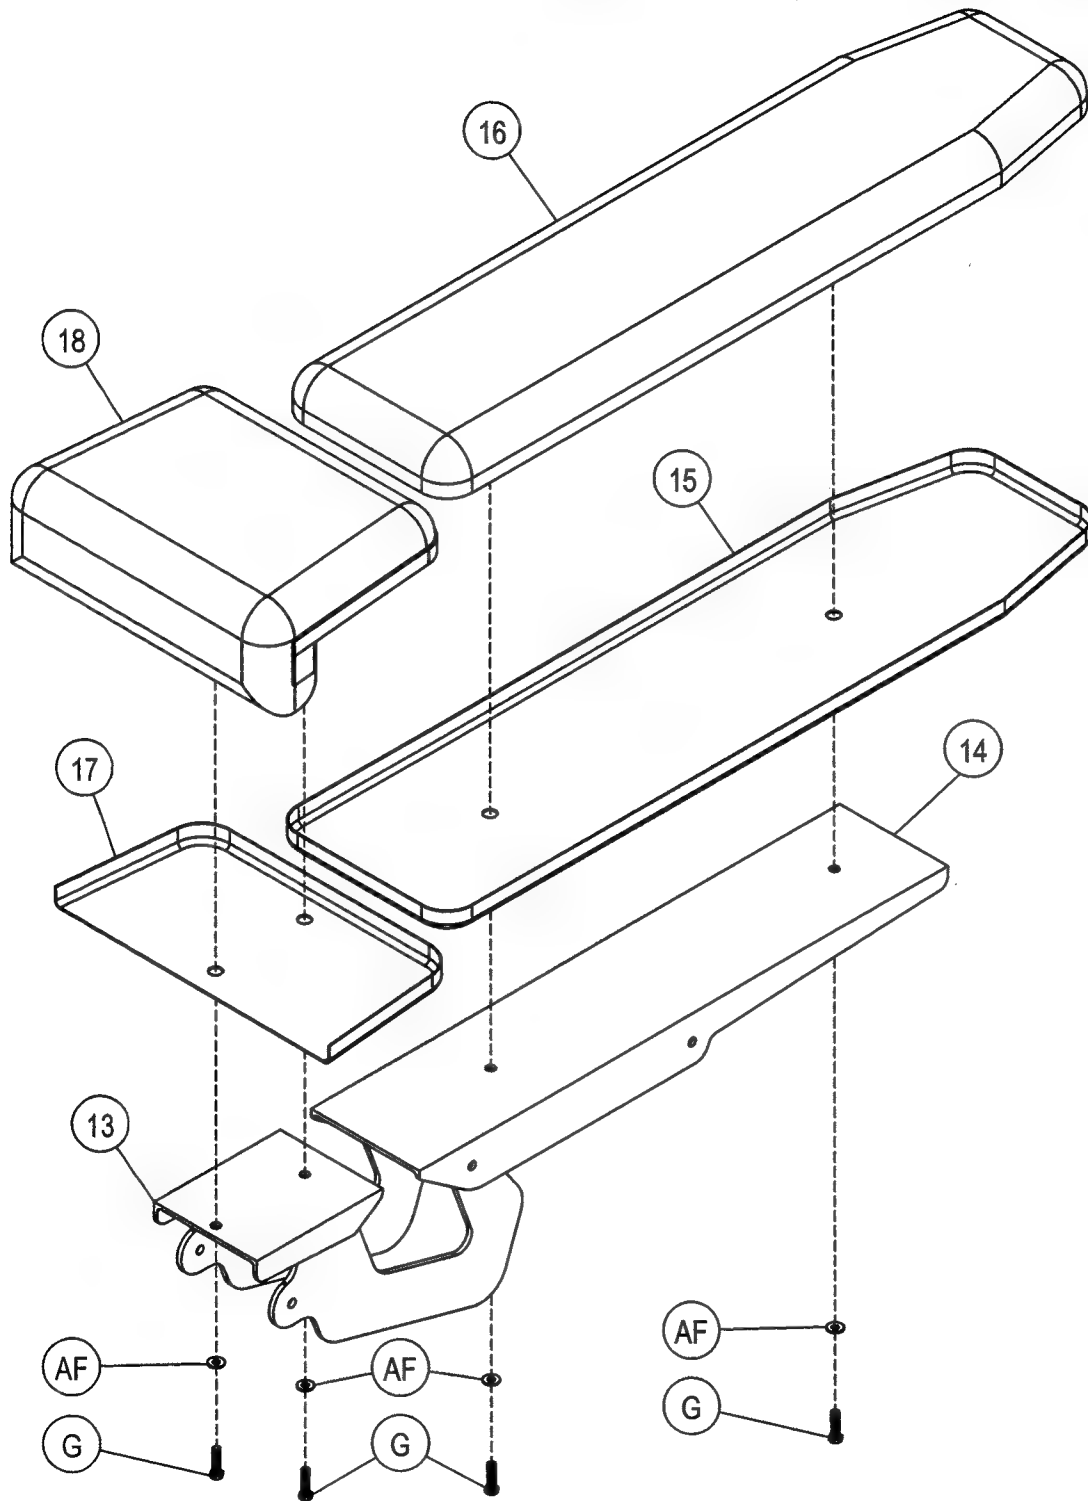


OWNERS MANUAL



OWNERS MANUAL

 Step 3 PRE-ASSEMBLY

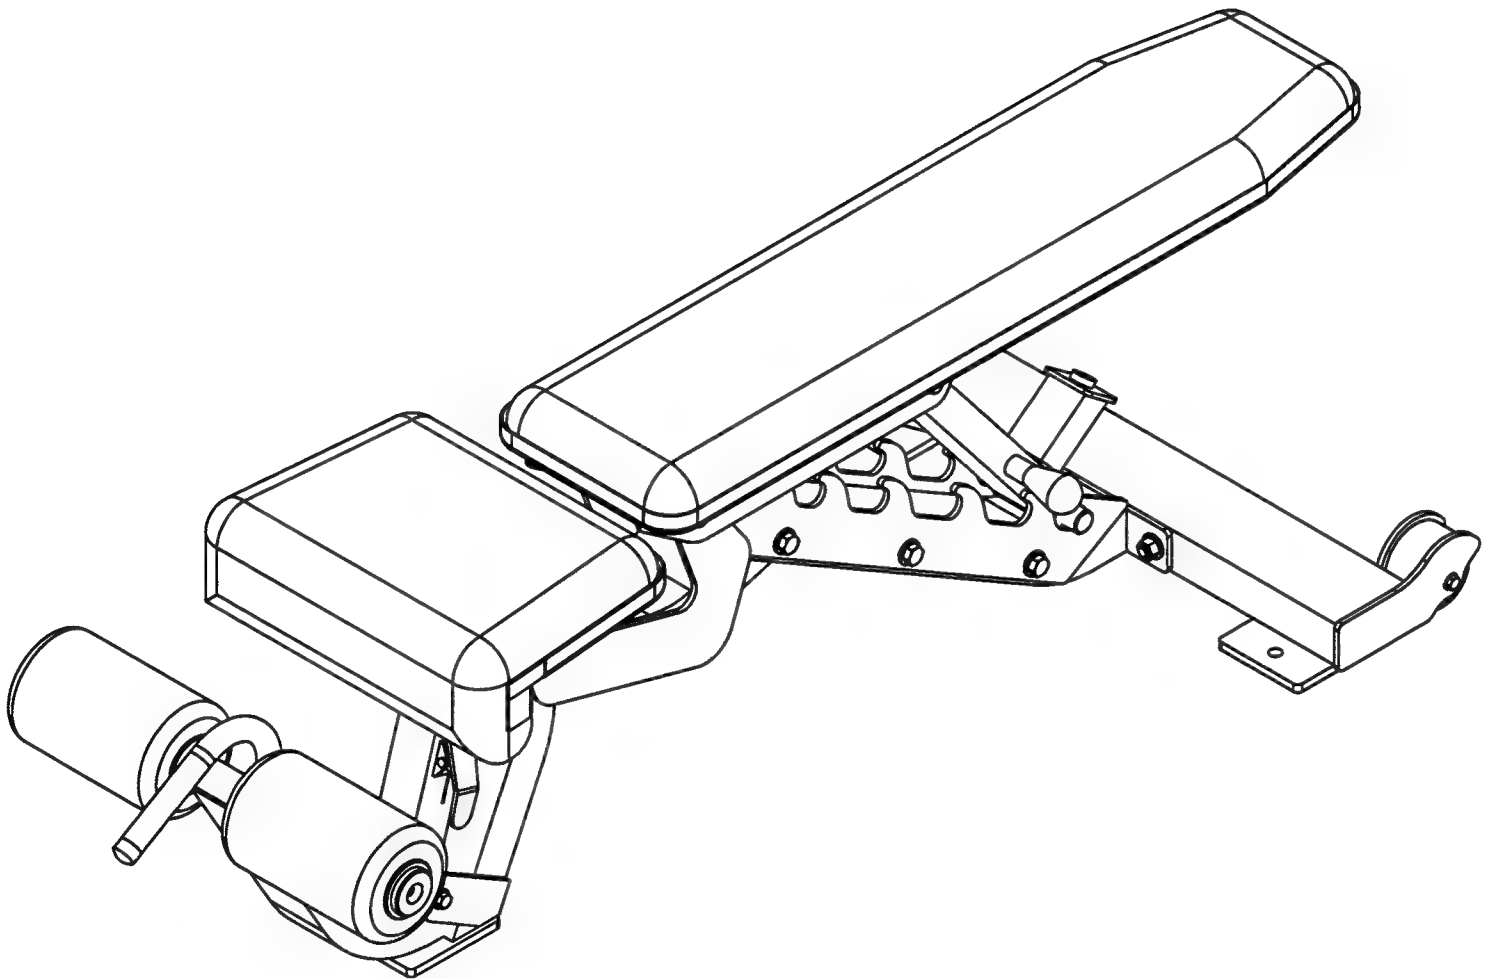

OWNERS MANUAL

Step 3a PRE-ASSEMBLY

 
Part Descriptions

1 - MAIN FRAME
4 - SEAT SELECTORIZED ASSEMBLY
6 - SELECTORIZED ASSEMBLY
8 - ADJUSTABLE SEAT ASSEMBLY
13 - PIVOTING SEAT ASSEMBLY
19 - EZ GLIDE SLEEVE
20 - LATCH ASSEMBLY
21 - LATCH SPRING
22 - LATCH PIN
23 - PLASTIC GRIP
24 - RUBBER GRIP 5.90" L.G.

Hardware Descriptions

I - 3/8" -16UNC x 3/4" SQ. HEAD SET
SCREW
CB - 3/4" FLANGED BALL BEARING
CC - PLUG BUMPER
CF - C-CLIP
CG - 1 1/2" x 1 1/2" END CAP
CH - Ø1.00" END CAP

OWNERS MANUAL

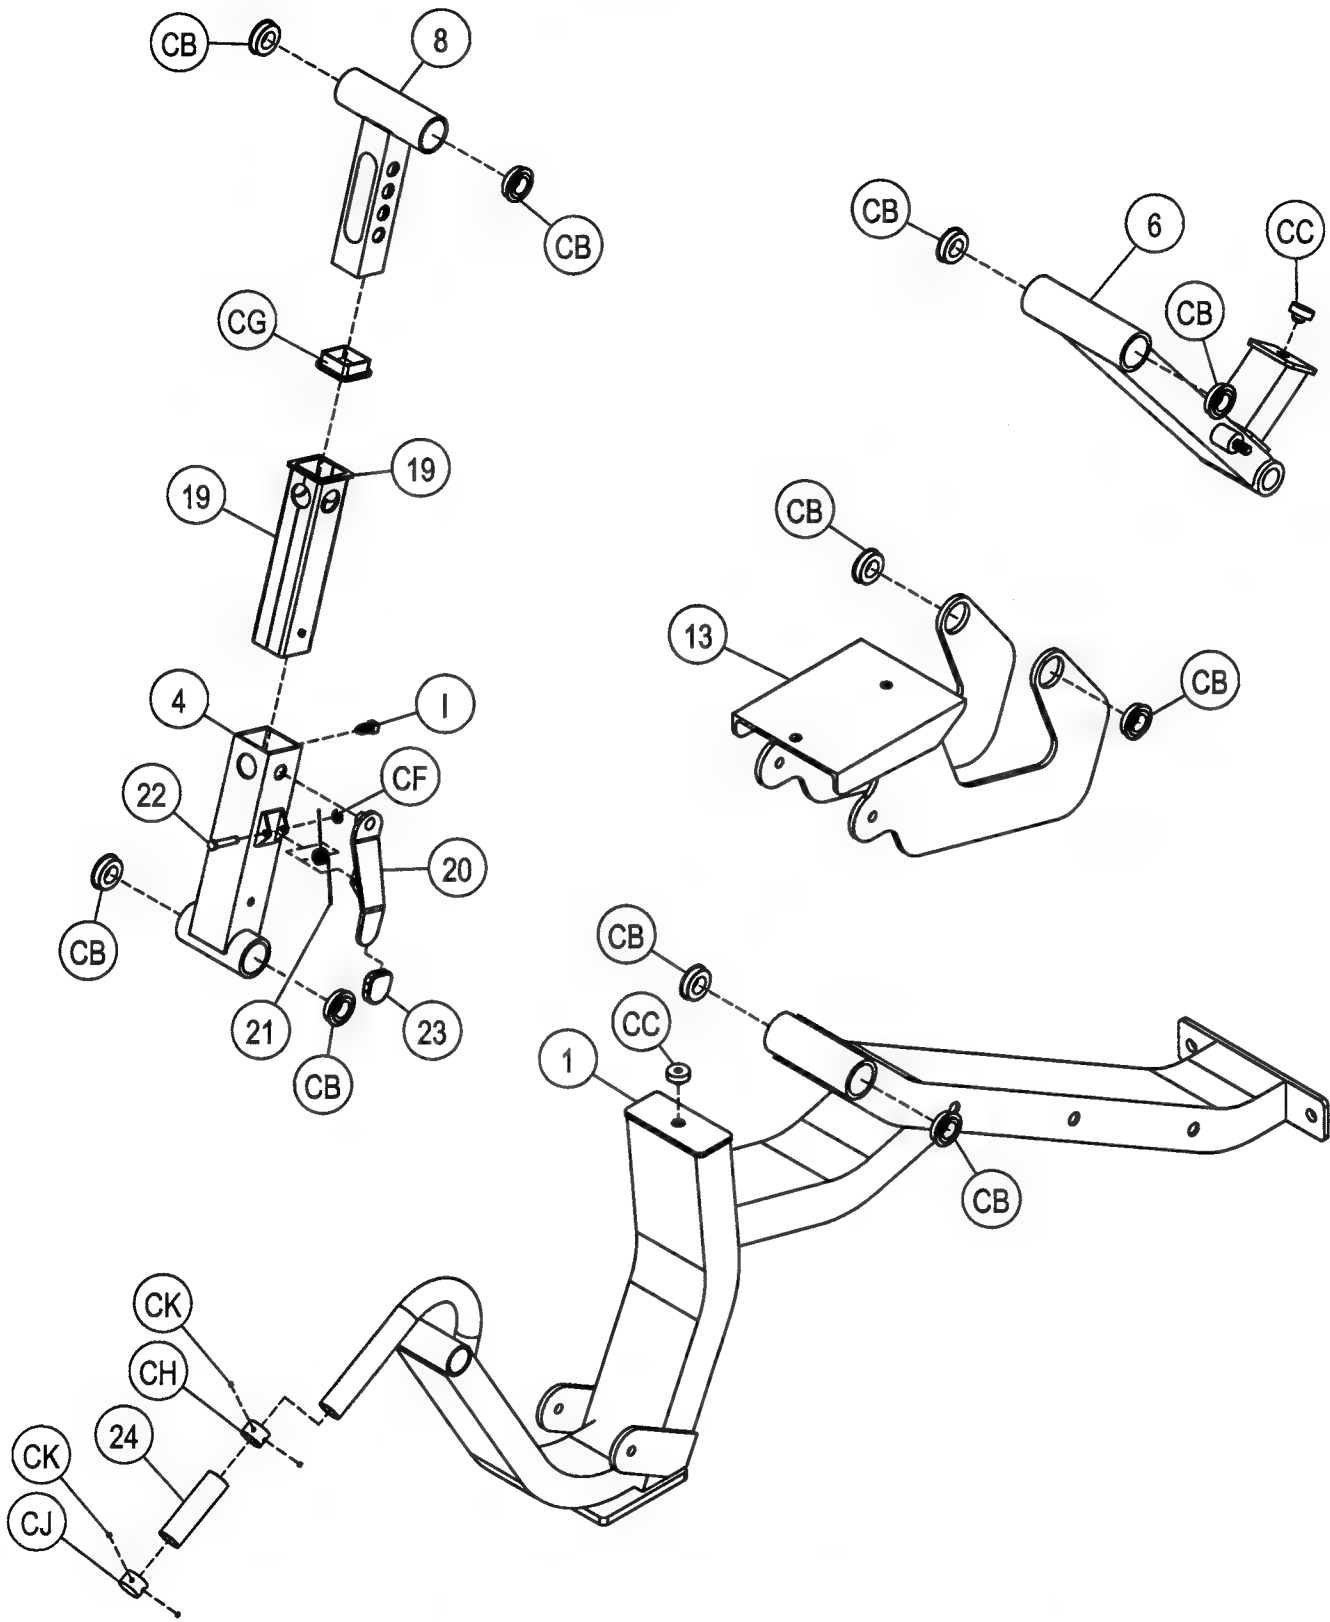

OWNERS MANUAL

PART LISTING

| <u>Key#</u> | <u>Qty.</u> | <u>Part Number</u> | <u>Description</u> |
|-------------|-------------|--------------------|---|
| 1 | 1 | 026-01X1054 | MAIN FRAME |
| 2 | 1 | 026-01X1056 | MAIN WHEEL ASSEMBLY |
| 3 | 2 | 026-01P0981 | SCALLOPED PLATE |
| 4 | 1 | 026-01X1057 | SEAT SELECTORIZED ASSEMBLY |
| 5 | 1 | 026-01M0583 | Ø3/4" x 3.94" LG. AXLE |
| 6 | 1 | 026-01X1055 | SELECTORIZED ASSEMBLY |
| 7 | 1 | 026-01M0582 | Ø1.00" SHAFT X 5.25" LG. |
| 8 | 1 | 026-01X1058 | ADJUSTABLE SEAT ASSEMBLY |
| 9 | 2 | 026-01M0238 | 3/8" FLATHEAD CAP, Ø2" x 5/16" THICK |
| 11 | 1 | 026-01X1060 | 1" ROLLER BAR ASSEMBLY |
| 12 | 2 | 26-STD-10-0244 | Ø5.00" X 8.00" LG. ROLLER |
| 13 | 1 | 026-01X1059 | PIVOTING SEAT ASSEMBLY |
| 14 | 1 | 026-01P0982 | PIVOTING BACK ASSEMBLY |
| 15 | 1 | 026-01PL302 | BACK GUARD |
| 16 | 1 | 022-01PD0072A | BACK PAD ASSEMBLY |
| 17 | 1 | 026-01PL301 | SEAT GUARD |
| 18 | 1 | 022-01PD0052 | SEAT PAD ASSEMBLY |
| 19 | 2 | 026-01PL125T | EZ GLIDE SLEEVE |
| 20 | 1 | 026-01P0480 | LATCH ASSEMBLY |
| 21 | 1 | 026-01M0503 | LATCH SPRING |
| 22 | 1 | 026-01M0309 | LATCH PIN |
| 23 | 1 | 026-01PL329 | PLASTIC CAP |
| 24 | 1 | 026-01PL206-7 | RUBBER GRIP 4" LG. |
| 25 | 1 | 026-01M0584 | Ø3/4" x 5.13" LG. AXLE |
| 26 | 2 | 026-01M0585 | Ø3/4" x 5.94" LG. AXLE |
| 27 | 2 | 020-0007004 | INCLINE ADJUSTOR KNOB |



OWNERS MANUAL

HARDWARE LISTING



| <u>Key#</u> | <u>Qty.</u> | <u>Part Number</u> | <u>Description</u> |
|-------------|-------------|--------------------|--|
| A | 2 | 011-0407054 | 3/8" -16UNC x 7" HEX BOLT (WZ) |
| B | 2 | 011-0102022 | 3/8" -16UNC x 1" FLAT HEAD BOLT(WZ) |
| D | 2 | 011-0101037 | 5/16" -18UNC x 2 3/4" HEX BOLT (WZ) |
| E | 3 | 011-0407052 | 1/2" -13UNC x 5" HEX BOLT (WZ) |
| F | 1 | 011-0007064 | 3/8" -16UNC x 6 1/4" HEX BOLT (WZ) |
| G | 4 | 011-0407053 | 5/16" -18UNC x 1 1/4" HEX BOLT (WZ) |
| H | 2 | 011-0007001 | 1/2-13UNC x 4 3/4" HEX BOLT (WZ) |
| I | 1 | 011-0311013 | 3/8" -16UNC x 3/4" SQ. HEAD SET SCREW (BZ) |
| J | 1 | 011-0107022 | 3/8" -16UNC x 5" HEX BOLT (WZ) |
| K | 1 | 011-0101030 | 5/16" -18UNC x 1" BUTTON HEAD SCREW (WZ) |
| AA | 10 | 013-0102003 | 1/2" SAE FLAT WASHER |
| AB | 8 | 013-0002004 | 3/8" SAE WASHER |
| AC | 4 | 013-0002001 | 5/16" SAE WASHER |
| AD | 4 | 26-STD-06-0254 | PLASTIC FLANGED BUSHING |
| AE | 1 | 013-0102007 | 5/16" INTERNAL LOCK WASHER |
| AF | 4 | 013-0102004 | 5/16" USS WASHER |
| AG | 1 | 013-0903003 | 5/16" CURVED WASHER |
| BA | 5 | 012-0004001 | 1/2" NYLOK NUT (WZ) |
| BB | 4 | 012-0004004 | 3/8" NYLOK NUT (WZ) |
| BD | 2 | 012-0102006 | 5/16" NYLOK NUT (WZ) |
| CA | 3 | 026-01PL195 | RUBBER FOOT PAD |
| CB | 10 | 014-0101014 | 3/4" FLANGED BALL BEARING |
| CC | 2 | 019-0001001 | PLUG BUMPER |
| CD | 2 | 014-0016006 | WHEEL AXLE |
| CE | 2 | 020-0013001 | WHEEL |
| CF | 1 | 014-0015001 | C-CLIP |
| CG | 1 | 016-0201004 | 1 1/2" x 1 1/2" END CAP |
| CH | 1 | 026-01M0324 | 1.030" I.D. x .375" ALUMINUM RING |
| CJ | 1 | 026-01M0323 | 1.030" I.D. x .75" ALUMINUM CAP |
| CK | 4 | 011-0311005 | 10-32 x 1/8" SET SCREW |
| CL | 2 | 014-0011001 | NYLINER BUSHING |

OWNERS MANUAL

 
 
5/16" HEX BOLT

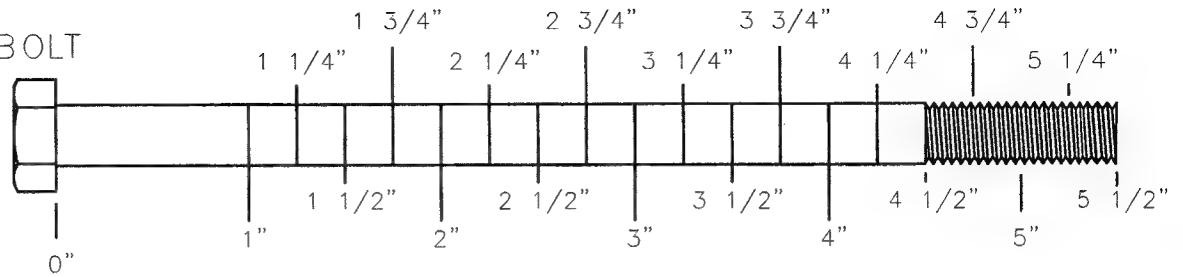



3/8" HEX BOLT

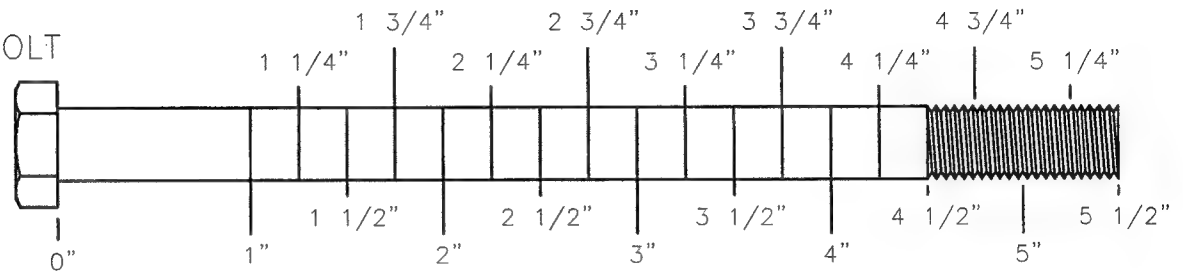  

1/2" HEX BOLT

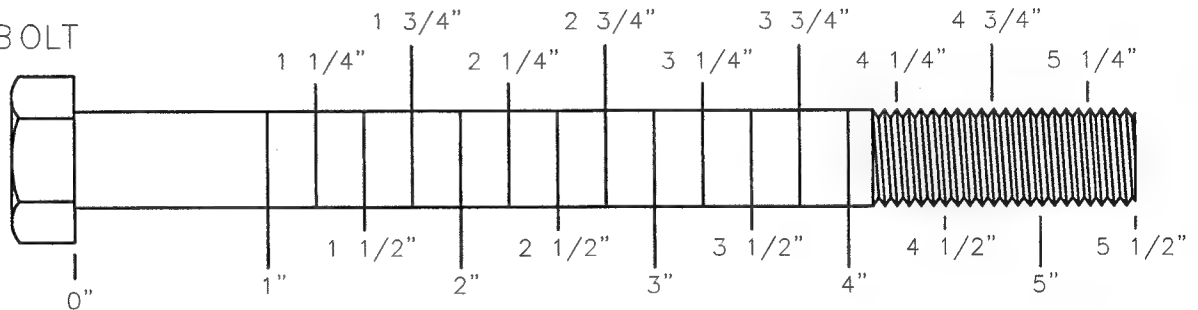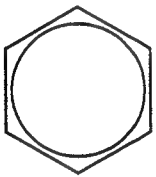  


1/2" SHOULDER BOLT

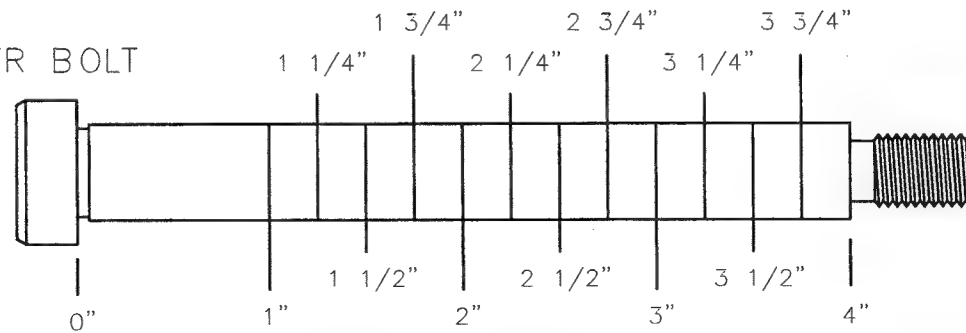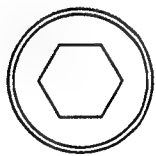  


OWNERS MANUAL

 
3/8" FLATHEAD
SOCKET CAP SCREW

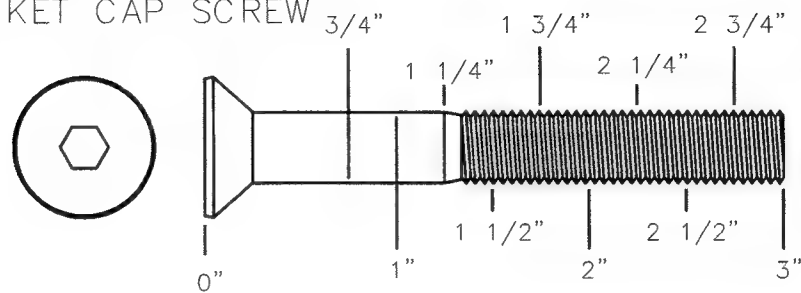


3/8" SOCKET
CAP SCREW

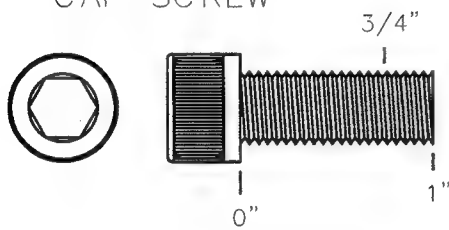 


3/8" BUTTON
HEAD CAP SCREW

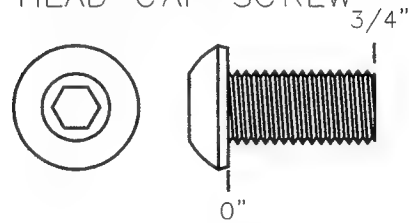 

1/4" HEX
BOLT

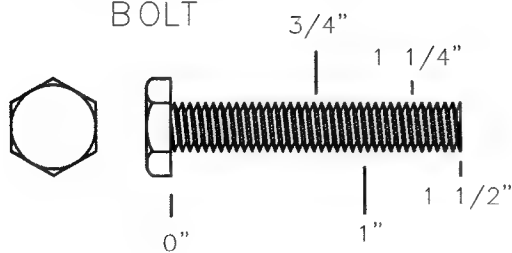 


1/2" FLATHEAD
SOCKET CAP SCREW

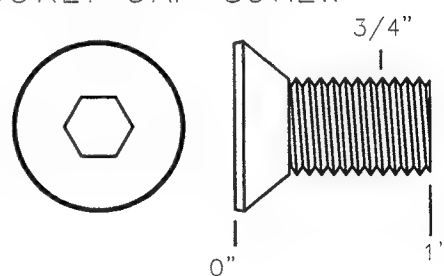 


OWNERS MANUAL

 
5/16"
FLAT WASHER
LARGE, USS, 25mm

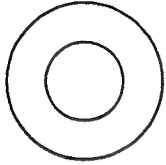


3/8"
FLAT
WASHER

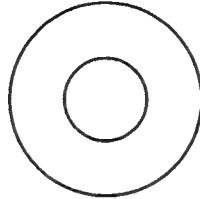 

1/2"
FLAT WASHER
SMALL, SAE, 26mm

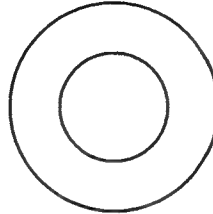 


1/2"
FLAT WASHER
LARGE, USS, 34mm

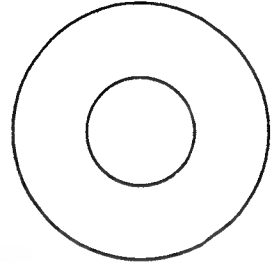 


1/4"
LOCK WASHER



 
3/8"
LOCK WASHER

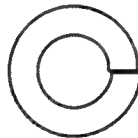


1/2"
LOCK WASHER

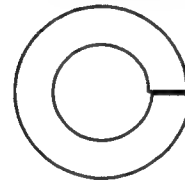 


1" SHIM WASHER

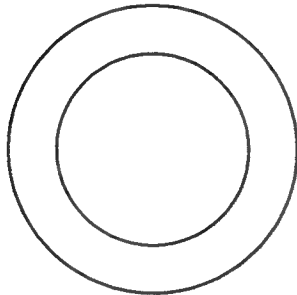 


3/8" FENDER WASHER

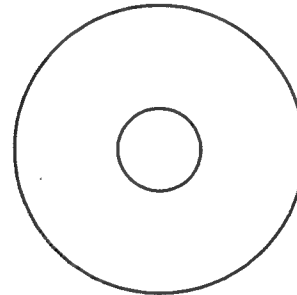 

1 1/16"
FENDER WASHER

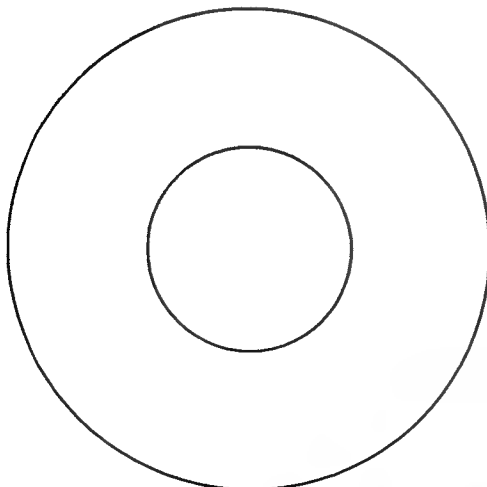 


PLASTIC 1 1/16"
FENDER WASHER

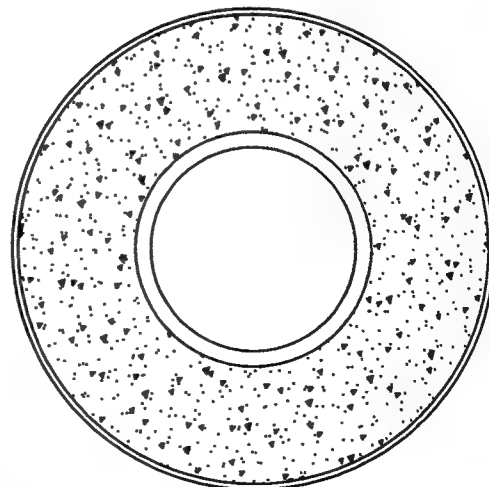 


OWNERS MANUAL

 
1/4" LONG
FLANGED SPACER

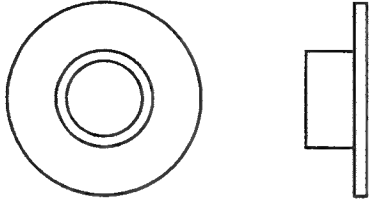


1/2" LONG
FLANGED SPACER

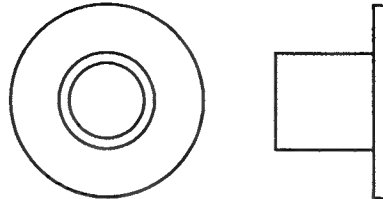 

1/4" LONG HEAVY
FLANGED SPACER

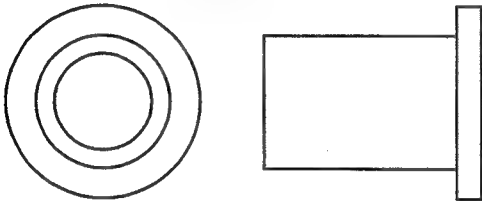 

11/16" LONG HEAVY
FLANGED SPACER

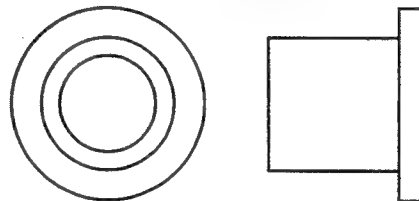 


1/2" LONG
SPACER




1" LONG
SPACER



 1 3/8" ALUMINUM
FLATHEAD CAP

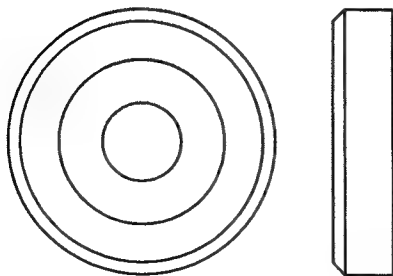

1 5/8" ALUMINUM
FLATHEAD CAP

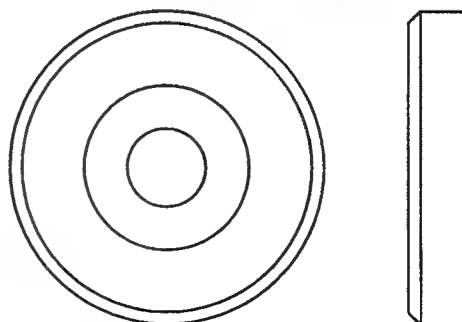 

OWNERS MANUAL

WEIGHT TRAINING TIPS

Always consult your physician before starting any exercise program.

Hoist equipment is designed to maximize your time spent working out. Having an exercise routine planned out in advance will allow you to get the most benefit out of the time spent exercising, and will also enable you to work all the major muscle groups.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

OWNERS MANUAL



OWNERS MANUAL

WEIGHT TRAINING EXERCISE LOG

S = Sets **R** = Repetition per set **W** = Weight used

[illegible]

OWNERS MANUAL

 


OWNERS MANUAL

DECAL PLACEMENTS

Decal Descriptions

- 1 - 021-0003131
- 2 - 021-0004072
- 3 - 021-0004033
- 4 - 021-0003230
- 5 - 021-0003148
- 6 - SERIAL # DECAL

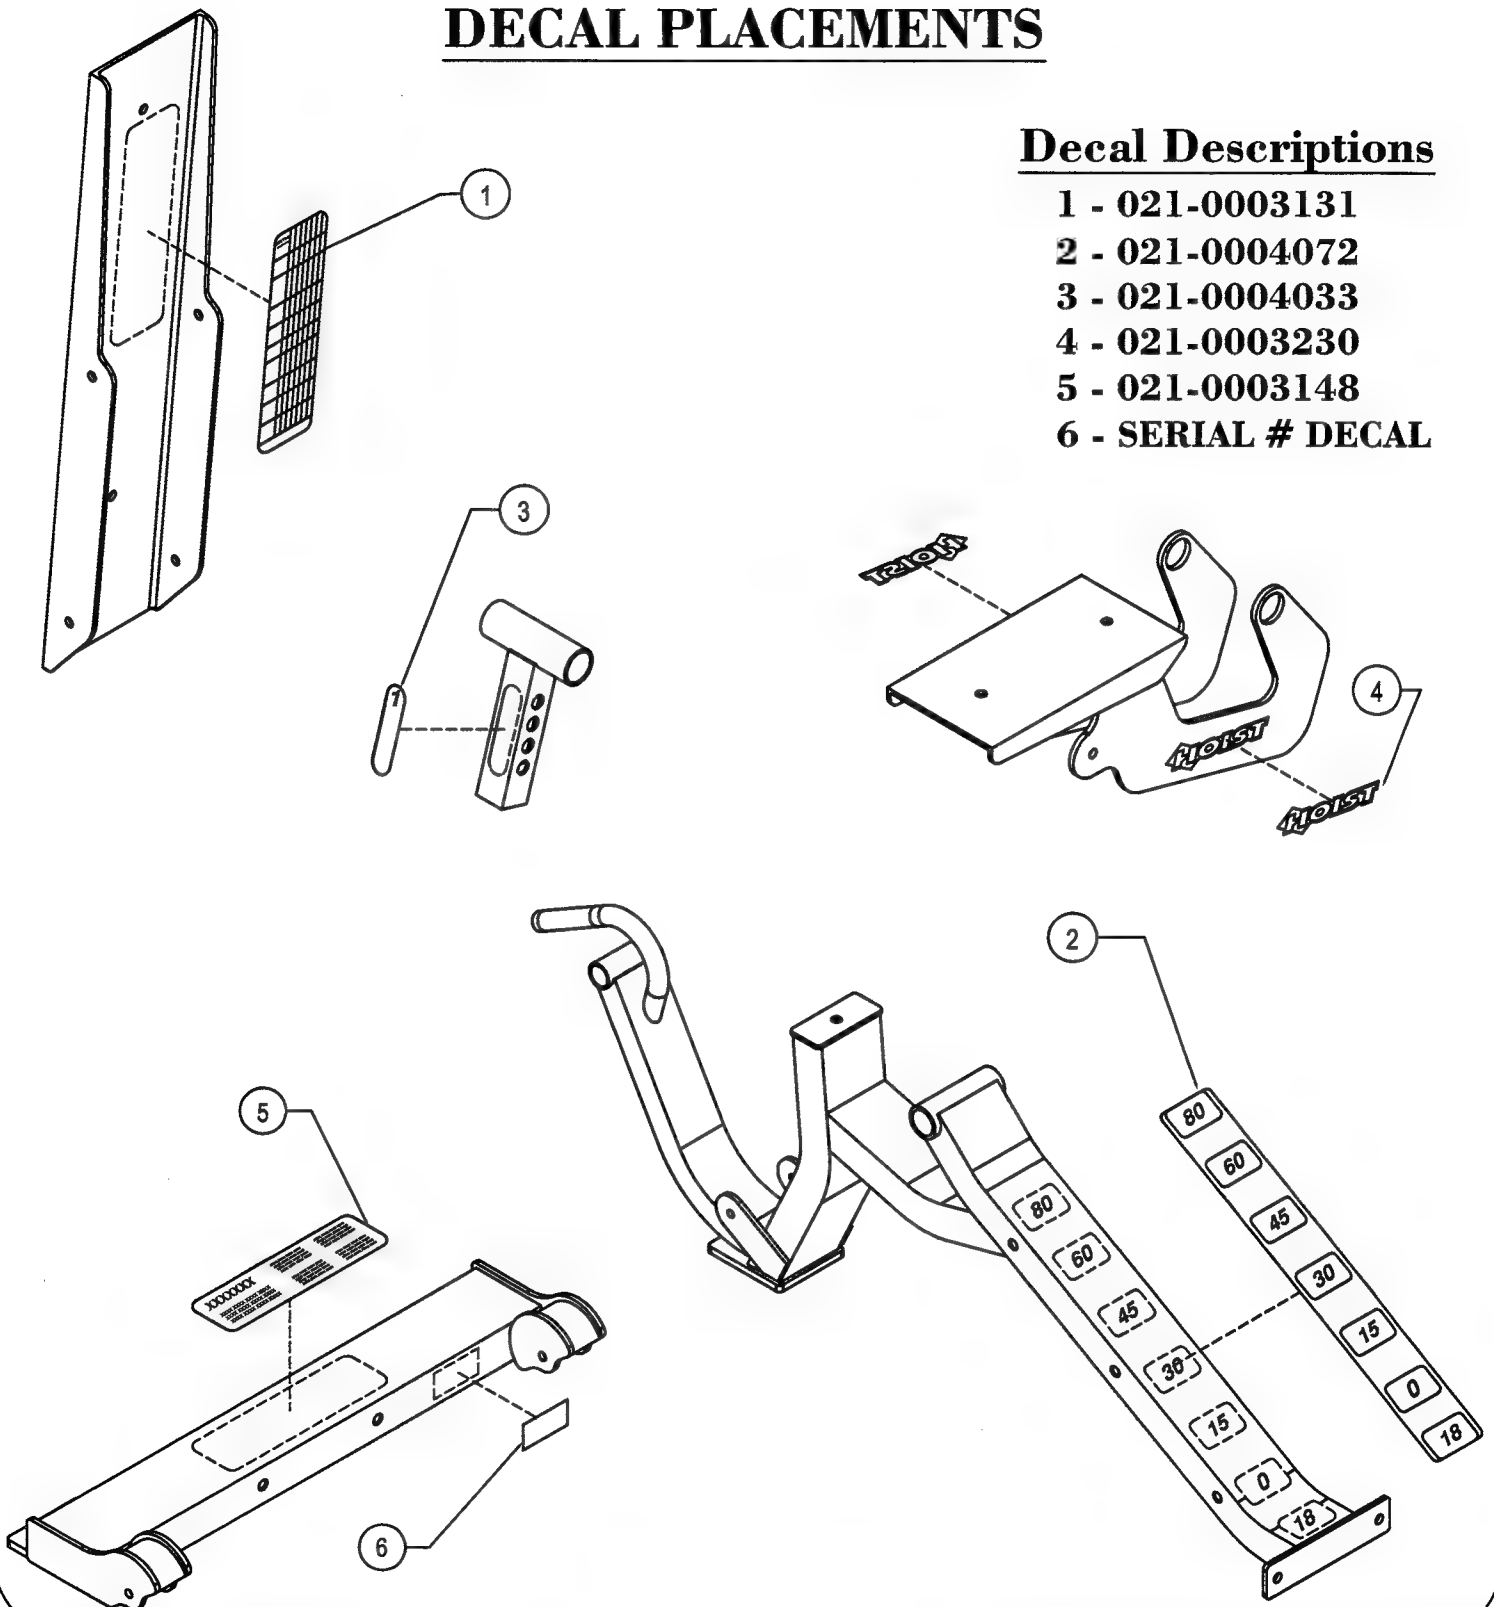

OWNERS MANUAL

DECAL PLACEMENTS

This decal has been attached to this piece of equipment to provide information regarding operation, safety and maintenance. Before use, take the time to read these decals.

| ROUTINE MAINTENANCE | Daily | Weekly | Monthly | Months 9 | Yearly |
|--|-------|--------|---------|-------------|--------|
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | X | | | | |
| Clean; Upholstery | X | | | | |
| Inspect; Cables or Belts and their tension | X | | | | |
| Inspect; Accessory Bars and Handles | | X | | | |
| Inspect; All Decals | | X | | | |
| Inspect; All Nuts and Bolts, Tighten if Needed | | X | | | |
| Inspect; Anti-Skid Surfaces | | X | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Supertube) | | | X | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearings | | | X | | |
| Clean and Wax; All Glossy Finishes | | | | X | |
| Repack with Grease; Linear Bearings | | | | X | |
| Replace; Cables, Belts and Connecting Parts | | | | | X |

021-0003131

80

60

45

30

15

0

18

021-0004072

OWNERS MANUAL

DECAL PLACEMENTS

SERIAL # DECAL; Always refer to the number shown on your piece of equipment when talking to customer service or ordering parts.

1 2 3 4

021-0004033



021-0003230

WARNING

**USE ONLY GENUINE HOIST
REPLACEMENT PARTS. FAILURE TO
DO SO WILL VOID WARRANTY AND
COULD RESULT IN PERSONAL INJURY
OR EVEN DEATH. THERE IS A RISK
ASSUMED BY INDIVIDUALS WHO
USE THIS TYPE OF EQUIPMENT.
TO MINIMIZE THE RISK
ALWAYS FOLLOW THESE
SIMPLE RULES.**

**1. READ & UNDERSTAND ALL
ENCLOSED INSTRUCTIONS before
using this equipment.**

**2. INSPECT EQUIPMENT BEFORE
EACH USE. Replace all parts at the
first signs of wear or damage. If in
doubt about a certain part, DO NOT
use the equipment until the part is
replaced. Failure to replace worn or
damaged parts may result in injury.**

**3. FOLLOW ROUTINE
MAINTENANCE SCHEDULE**

**4. CONSULT YOUR PHYSICIAN
BEFORE STARTING ANY
EXERCISE PROGRAM. Warm up
properly before engaging in weight
resistance training. Stop exercising
if you feel faint or dizzy.**

**5. TO PREVENT THE POSSIBILITY
OF SERIOUS INJURY, KEEP CLEAR
OF ALL MOVING PARTS. Do not
attempt to free any jammed part by
yourself. Obtain assistance in order to
avoid possible injury.**

**6. Take your time and do not rush the
exercise. Practice proper breathing,
NEVER hold your breath.**

**7. CHILDREN SHOULD NOT BE
ALLOWED TO USE THIS
EQUIPMENT. To avoid possible
injury, children should be kept at a safe
distance when this equipment is in use.
Teenagers should not use this equipment
without adult supervision.**

**8. CALL YOUR AUTHORIZED
HOIST DISTRIBUTOR if you have
any questions on the proper use or
maintenance of this equipment.**

021-0003148



OWNERS MANUAL

DECAL PLACEMENTS

SERIAL # DECAL; Always refer to the number shown on your piece of equipment when talking to customer service or ordering parts.



SERIAL # DECAL

OWNERS MANUAL



OWNERS MANUAL

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Locks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.*
- *Check springs in snap hooks and pull-pins for proper tension and alignment.*
- *If the spring sticks or has lost its rigidity, replace it immediately.*

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.*
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.*
- *Replace ripped or worn upholstery immediately.*
- *Keep sharp or pointed objects clear of all upholstery.*

Guide Rods:

- *Wipe clean with a dust free rag. Lubricate once a week with a Silicon or Teflon based lubricant.*

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.*

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.*
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.*

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.*

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.*
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.*
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.*
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables has been replaced.*

OWNERS MANUAL

GENERAL MAINTENANCE INFORMATION (CONTINUED)

Cable Tension:

**Referring to the Owners Manual, check all cable bolts and attachment to be sure they are properly attached.*

**Check slack in cables and readjust cable tension if needed.*

Seat Sleeves, Turcite Bushings:

**Wipe down adjusting tubes with a dust free rag before applying lubricant.*

**Lubricate seat sleeves and turcite bushings with a Silicon or Teflon based lubricant spray.*

Linear Bearings:

**Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.*

PLEASE KEEP THIS FOR YOUR RECORDS

OWNERS MANUAL

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

Starting from the original date of purchase, normal wear and tear shall be considered as the following: All malfunctions of upholstery and paint that occur after 90 days; all malfunctions of electronic components, belts or cables that occur after one year; all malfunctions of pulleys, bearings or bushings that occur after five years. The frame and all welded components are warranted for the life of the product.

Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

WHAT IS NOT COVERED BY THIS WARRANTY

Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and (5) year warranty described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

ALTERATION, NEGLECT, ABUSE, MISUSE, NORMAL WEAR & TEAR, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION FIRE, FLOOD, ACTS OF GOD. Hoist is not responsible for the repair or replacement of any parts that Hoist determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, normal wear & tear, accident, damage during transit or installation, fire, flood, or an **ACT OF GOD**.

TRANSPORTATION COSTS. Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

WARRANTY CLAIMS. All claims should include: model number, the serial number, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect.

Hoist Fitness Systems
9990 Empire St. #130
San Diego, Calif. 92126
(800)548-5438

Web Site - www.hoistfitness.com

PLEASE KEEP THIS FOR YOUR RECORDS